


WIRING DIAGRAM FOR ADVANCED MODE

- DOMOTIC CONTROL UNIT
- UP/DOWN SELECTOR

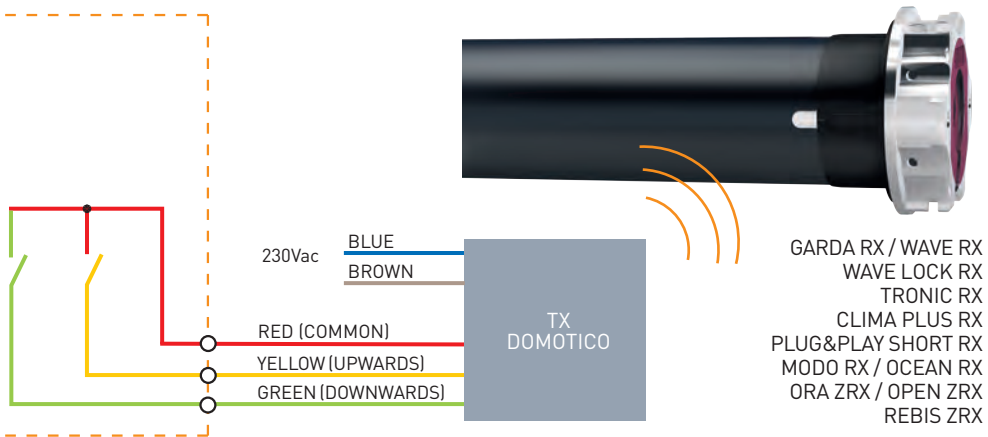

THE DOMOTIC TRANSMITTER IS SET IN THE FACTORY TO WORK IN THE STANDARD MODE.