



# A510089 META PWM DIMMER ZRX





- 2-channel dimmer with dual-Radio EN
  - 2-Kanal-Dimmer mit dual Funk DE
- Variateur 2 canaux avec double radio **FR**
- Actuador de iluminación de 2 canales **ES** con radio dual

# Index:

Device description p. 26
Technical specifications p. 27
Safety information p. 27
Electrical connections diagram p. 28
Device installation p. 29
LED status indicator p. 29
Add/remove the device into a Z-Wave <sup>™</sup> network (classic) p. 30
SmartStart inclusion p. 31
S2 Secure Inclusion p. 31
Supported command classes p. 32-33
Device control p. 34
Controlling the device by External Switchesp. 34
Controlling the device by a Z-Wave <sup>™</sup> controllerp. 35
Associations p. 35
Timer management p. 36
Reset to the factory settings p. 36
Firmware update p. 36
Offline setup mode p. 37
Configurations p. 38
ZRX variant of the device p. 43

#### EU declaration of conformity

CHERUBINI S.p.A. declares that the product is in conformity with the relevant Union harmonisation legislation: Directive 2014/53/EU, Directive 2011/65/EU.

The full text of the EU declaration of conformity is available upon request at the following website: www.cherubini.it.

Failure to comply with these instructions annuls CHERUBINI's responsibilities and guarantee.



The crossed-out wheelie bin symbol indicates that the product must be collected separately from other waste at the end of its useful life. Therefore, users should deliver this product to appropriate waste collection points or return it to their dealers at the end of its service life. See your local authority's regulations.

Adequate waste sorting for subsequent processing and environmentally compatible disposal helps to avoid possible negative effects on the environment and public health and promotes reuse and/or recycling of the materials used to make the equipment.

#### **DEVICE DESCRIPTION**

Meta PWM Dimmer ZRX is a PWM dimmer controllable through Z-Wave<sup>™</sup> protocol, for constant voltage LED loads, such as LED strips, halogen lights and constant voltage LED modules. Controlled devices may be powered by 12 or 24 VDC.

It is connected between a 12-24 VDC power supply and the constant voltage LED load. The maximum combined output current is 12 A and 6A maximum per each channel.

It operates in any Z-Wave<sup>TM</sup> network with other Z-Wave<sup>TM</sup>/Z-Wave Plus<sup>TM</sup> certified devices and controllers from any other manufacturer. As a constantly powered node, the device will act as repeater regardless of the vendor in order to increase the reliability of the network.

This device is a security enabled Z-Wave Plus<sup>™</sup> product that is able to use encrypted Z-Wave Plus<sup>™</sup> messages to communicate to other security enabled Z-Wave Plus<sup>™</sup> products.

This device must be used in conjunction with a Security Enabled Z-Wave<sup>™</sup> Controller in order to fully utilize all implemented functions.

The device can also be controlled by Cherubini remote controls of SKIPPER - POP or GIRO series.

Integrated Button with LED indicator



Integrated Button

**Power Supply** 

Output Input Switch 1 or 3 clicks to enter in Learn Mode 6 clicks to reset the system to manufacturer's settings 2 clicks to enter in setup mode

5, 6 - inputs

1 - positive (+)

#### **TECHNICAL SPECIFICATIONS**

Power supply	12 - 24 VDC
Maximum Load	6A for each channel
System temperature limitation	105 °C
Work temperature	From -10° to 40° C
Power consumption	< 260 mW in standby
	< 480 mW with working load
Radio frequency	868,4 MHz
Protection system	S2 Security
Maximum distance	Up to 100 m outdoor
	Up to 40 m indoor
Dimensions	37x37x17 mm
Actuator element	2 Power Mosfet
Compliance	CE, RoHs
Electrical IP Rating	IP20

#### SAFETY INFORMATION



**INFO:** The device is designed to be installed in flush mounting junction boxes or close to the load to be controlled.



**WARNING:** The device must be installed by electricians qualified to intervene on electrical systems in compliance with safety requirements set out by the regulations in force.



**DANGER:** Any procedure requiring the use of the Integrated Button is related only to the installation phase and is to be considered a service procedure that must be performed by qualified personnel. This operation must be performed with all necessary precautions for operating in areas with a single level of insulation.



WARNING: Do not connect loads that exceed the maximum load permitted by the actuator element.




**WARNING:** All connections must be performed according to the electrical diagram provided below.



WARNING: The device must be installed in norm-compliant systems suitably protected from overloads and short circuits.

### ELECTRICAL CONNECTIONS DIAGRAM

The device must be supplied by 12 or 24 VDC Power Supply. Connections must be done following the diagram below:

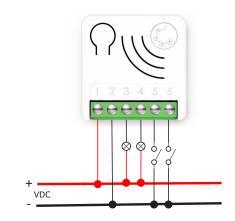

**Power Supply** 

- 1 positive terminal (+)
- 2 negative terminal (-)

Output

ENGLISH

Input Switch

- 3 output 1
- 4 output 2
- 5 input 1
- 6 input 2

#### **DEVICE INSTALLATION**

- 1) Make sure the main switch is set to the OFF position
- 2) Connect the device based on the diagrams provided
- 3) Turn the main switch to the ON position
- 4) Include the device in the Z-Wave  ${}^{\rm TM}$  network

**TIP:** The antenna must not be shortened, removed or modified. To ensure maximum efficiency, it must be installed as shown. Large size metal equipment near the antenna can negatively affect reception. Each device is a node in a mesh network. If there are metal obstacles, the obstacle can often be overcome with a further triangulation node.



# LED STATUS INDICATOR

The system includes an RGB LED that shows the device's status during installation: Solid RED: the device is not included in any network Solid BLUE: the device is Offline setup mode 4 GREEN blinks then OFF: the device has been just added to a Z-Wave<sup>™</sup> network in S2 Authenticate Mode 4 BLUE blinks then OFF: the device has been just added to a Z-Wave<sup>™</sup> network in S2 Unauthenticated Mode 4 RED blinks then OFF: the device has been just added to a Z-Wave<sup>™</sup> network without security Sequence of GREEN-BLUE Learn Mode for inclusion Sequence of GREEN-BLUE Learn Mode for exclusion Rapid sequence of GREEN-BLUE-RED: the event on the input (external switch) is not valid

#### ADD/REMOVE THE DEVICE INTO A Z-WAVE<sup>™</sup> NETWORK (classic)

#### Standard Inclusion (add)

All META Serie 7 devices are compatible with all Z-Wave<sup>TM</sup>/Z-Wave Plus<sup>TM</sup> certified controllers. The devices support both the **Network Wide Inclusion** mechanism (which offers the ability to be included in a network, even if the device is not directly connected to the controller) and **Normal Inclusion**.

By default, the inclusion procedure starts in *Normal Inclusion* mode and after a short timeout the procedure continues in *Network Wide Inclusion* mode that lasts for about 20 Seconds.

Only a controller can add the device into the network. After activating the inclusion function by the controller, the device can be added by setting it in Learn Mode.

20 Seconds. Only a controller of function by the co Before including t device is executed controller interface is set in *Learn Mo* 

Before including the device, the LED status indicator is solid RED. <u>The adding of a device is executed by activating the adding procedure in the inclusion section of the controller interface and then executing 1 or 3 click on the integrated button (the device is set in *Learn Mode*). As soon as the inclusion procedure initiates the LED indicator starts a sequence of GREEN-BLUE blinks. The device is included in the network when the LED status is OFF and the interview is completed.</u>

#### Standard exclusion (remove)

Only a controller can remove the device from the network. After activating the exclusion function by the controller, the device can be removed by setting it in *Learn Mode*.

The procedure of exclusion can be activated by **Removing** a node from the Z-Wave<sup>™</sup> network and <u>executing 1 or 3 click on the integrated button</u>; as soon as the exclusion initiates, the LED indicator starts a sequence of RED-BLUE blinks. The device is excluded from the network when the LED status indicator is solid RED and the App\_status in the interface is OK.

# ENGLISH

#### SMARTSTART INCLUSION

Z-Wave<sup>™</sup> SmartStart aims to shift the tasks related to inclusion of an end device into a Z-Wave<sup>™</sup> network away from the end device itself, and towards the more user-friendly interface of the gateway.

Z-Wave<sup>™</sup> SmartStart removes the need for initiating the end device to start inclusion. Inclusion is initiated automatically on power-ON and repeated at dynamic intervals for as long as the device is not included into a Z-Wave<sup>™</sup> network. As the new device announces itself on power-ON, the protocol will provide notifications, and the gateway can initiate the inclusion process in the background, without the need for user interaction or any interruption of normal operation. The SmartStart inclusion process only includes S2 authenticated devices.

META Serie 7 devices can be added into a Z-Wave<sup>™</sup> network by scanning the Z-Wave<sup>™</sup> QR Code present on the product with a controller providing SmartStart inclusion. No further action is required and the SmartStart product will be added automatically within 10 minutes of being switched on in the network vicinity.

The SmartStart QR and the full DSK string code can be found on the back of the device. The PIN is the first group of 5 digits printed underlined. If you plan to use the DSK, it is important that you take a picture of the label and keep it in a safe place.



#### **S2 SECURE INCLUSION**

When adding META Serie 7 devices to a Z-Wave<sup>™</sup> network with a controller supporting Security 2 Authenticated (S2), the PIN code of the Z-Wave<sup>™</sup> Device Specific Key (DSK) is required. The unique DSK code is printed on the product label. The first five digits of the key are highlighted and underlined to help the user identify the PIN code.



#### SUPPORTED COMMAND CLASSES

Command Class	Version	Non-Secure CC	Secure CC
BASIC	2		х
ZWAVEPLUS_INFO	2	х	
ASSOCIATION	2		х
	3		х
ASSOCIATION_GRP_INFO	3		х
TRANSPORT_SERVICE	2	х	
VERSION	3		х
MANUFACTURER_SPECIFIC	2		х
DEVICE_RESET_LOCALLY	1		х
INDICATOR	3		х
POWERLEVEL	1		х
SECURITY_2	1	х	
SUPERVISION	1	х	
FIRMWARE_UPDATE_MD	5		х
APPLICATION_STATUS	1	х	
CONFIGURATION_V4	4		х
SWITCH_MULTILEVEL	4		х
CENTRAL_SCENE	3		х

#### **Supporting Command Class Basic**

The basic command classes are mapped into the Switch Binary Command Class.

Basic Command received	Commando Mappato (Binary Switch)
Basic Set (0xFF)	Switch Binary Set (0xFF)
Basic Set (0x00)	Switch Binary Set (0x00)
Basic GET	Basic Report 0x00 if the Binary Switch is in OFF state 0x00 Basic Report 0xFF if the Binary Switch is in ON state 0xFF

#### Supporting Command Class Indicator

The device supports the Command Class Indicator V3 (ID 0x50). When the device receives an indicator set, the led blinks accordingly to the Indicator set received.

The color shown by the indicator will be: **RED**: if the device is included without Security **BLUE**: if the device is included in S2 Unauthenticated Mode **GREEN**: if the device is already included in S2 Authenticated Mode.

# **DEVICE CONTROL**

META PWM Dimmer ZRX can turn ON/OFF and control the dimming level on two loads by using external switches, or from remote through a controller.

#### Controlling the device by External Switches

For the operation of the device within the Z-Wave<sup>™</sup> network and controlling the loads connected to the device, control actions are performed on the external switches.



The **CONTROL ACTIONS** are **EVENTS** executed on **EXTERNAL SWITCHES** connected to the terminals 5 and 6 of the device which can be *Clicks, Hold Down and Up.* 

Event	Type of switch	Actions on the switch	
Click	Momentary switch (button)	Press briefly & Release (when pressed it autonomously returns to the initial position)	
	Toggle Switch (bistabile)	Press & Release (a single click means one single flip of the switch)	
MultiClick= <b>n</b> click	Momentary switch	Sequence of consecutive <b>n</b> clicks	
	Toggle Switch	Sequence of consecutive <b>ii</b> clicks	
Hold Down	Momentary switch	Press longer than click. After a Hold Down always follows an UP event.	
Up	Momentary switch	Release. The event applies only if there has been a previous Hold Down event.	

- Hold down to the external switch connected to terminal 5, shifts the dimming level upward for both outputs.
- Hold down to the external switch connected to terminal 6, shifts the dimming level downward for both outputs.
- 1 click on one of the external switches, toggles both the loads from OFF to the last recent non-zero level and vice versa.
- 2 clicks on one of the external switches, toggles both the loads to full ON level.

Since the device supports Central Scene Notification all the events described in the table will be notified with a Central Scene Notification Report to the Lifeline. The events that trigger a Central Scene Notification Report can be customized with the configuration parameter in the Central Scene Notification Parameter section.

#### Controlling the device by a Z-Wave<sup>™</sup> controller

The device can be controlled by any Z-Wave<sup>TM</sup> / Z-Wave Plus<sup>TM</sup> certified controller available in the market.

The following figure represents an example of a control panel interface showing how the device will appear once it is included into the Gateway.



# I 1 9 I I

т

#### ASSOCIATIONS

META PWM Dimmer ZRX can control other devices like other relays or dimmers. The device supports 2 association groups, each of which supports the association of up to 8 devices (nodes):

Group ID	Group Name	N° max nodes	Description	Command sent
1	Lifeline	8	Lifeline Group. Nodes belonging to this group will receive: notifications about device reset; chan- ges related to the relay and Indicator Status and the Central Scene Notifi- cation.	DEVICE_RESET_LOCALLY_ NOTIFICATION SWITCH_BINARY_REPORT CENTRAL_SCENE_ NOTIFICATION INDICATOR_REPORT
2	Follow-me	8	The state of the output (ON/OFF) will be propagated to the associated device.	BASIC_SET



**INFO:** Association ensures direct transfer of control commands between devices and is performed without participation of the main controller.

#### TIMER MANAGEMENT

A timer can be set when switching On and/or Off. It is also possible to define which event will start the timer. (for example only the change on the output due to double clicks).

#### **RESET TO THE FACTORY SETTINGS**

The device can be reset to the original factory with 6 consecutive clicks on the integrated button.

After the reset is completed, the device will reboot and a RED solid led is showed. Please use this procedure only when the network primary controller is missing or otherwise inoperable.

S After Plea oth U U U

Т

**INFO:** If the reset is performed while the device is still part of a network, it notifies the other devices that it has been removed (*Device Reset Locally Notification*).

#### **FIRMWARE UPDATE**

The system supports over-the-air firmware updates that do not require the device to be removed from its location. The firmware update can be activated from all certified controllers supporting version 2 of the Firmware Update function.



**WARNING:** The system will be rebooted at the end of the firmware update procedure. It is advisable to carry out the firmware update procedure only when necessary and following careful planning of the intervention.

#### **OFFLINE SETUP MODE**

The device has a unique feature that allows to configure some parameters without using any user interface. This feature enables the professional user to setup the main features of the device in the field even if the device is not included in a Z-Wave<sup>™</sup> Network. When the device will be included in the network all these configuration parameters will be maintained.

To enter in offline setup mode, operate 2 clicks on the integrated button.

When the device is in Offline setup mode the led becomes solid Blue and the following configurations are permitted:

1 click Sets the input type to activate/deactivate the switch. Equivalent to setting parameter No.1 to 2.						
2 clicks	clicks Set the actual dimming level as 1% dimming level. (Equivalent to set parameter n. 5 with actual dimming level).					
3 clicks Restore the default value of 1% for dimming level. (Equivalent reset the parameter n. 5).						
After receiving the co clicks recognized.	ommand the led blinks a number of times equal to the number of					
6 clicks Exit from Offline setup mode and return to normal operation.						
Hold down for 5 secondsReset all configuration parameters to their default value a return to normal operation.						

After entering in Offline setup mode, the device returns to normal operation if no action on the switch is detected for more than 20 Seconds.

## CONFIGURATIONS

#### Input Configuration

	Parameter Number	Size	Parameter Name	Default Value	Description			
	1	1	IN_TYPE	1	Define the input type.			
	Parameters Values Min: 1 Ma				Max: 3			
т	Value	Description						
I S	0	No sw	No switch input					
NGLI	1	Mome	ntary switch (l	outton)				
07	2	Toggle switch						
ш	3	Double Button (up/down)						
		Double						

Parameter Number	Size	Parameter Name	Default Value	Description		
5	1	MIN_LEVEL	1	Define the level associate to 1%.		
Parameters	Parameters Values			Min: 1	Max: 99	
Value	Description					
1-99	Specific dimming level					

Parameter Number	Size	Parameter Name	Default Value	Description		
10	1	LOCAL_ ON_OFF	1	Define the time duration in second used for switch On/Off when the exten nal button is pressed 1 or 2 times.		
Parameters Values			Min: 0	Max: 120		
Value	Description					
0-120	Specifi	Specific duration time in seconds				

Parameter Number	Size	Parameter Name	Default Value	Description	
11	1	LOCAL_ DIMMING	5	Define the time duration in second used for dimming locally (Hold Down o external switch).	
Parameters	s Value	5		Min: 0	Max: 120
Value	Descri	iption			
0-120	Specific duration time in seconds				

Value	Descr	Description					
0-120	Specif	ic duration tim	e in seconds	;		н	
						S	
Parameter Number	Size Parameter Default Description					C C	
12	1	NETWORK_ DIMMING	2	Define the time duration in seconds, used for dimming when a network com- mand is received without duration info.			
Parameters	s Value	s		Min: 0	Max: 120		
Value	Description						
0-120	Specifi	ic duration tim	e in seconds	;			

#### **Output Configuration:**

Parameter Number	Size	Parameter Name	Default Value	Description		
15	1	DIMMING_ ON_TIMER	0	Define the dimming duration in second used by the On timer.		
Parameters Values				Min: 0	Max: 120	
Value	Description					
0-120	Specific duration time in seconds					

Parameter Number	Size	Parameter Name	Default Value	Description		
16	1	DIMMING_ OFF_TIMER	0	Define the dimming duration in secor used by the Off timer.		
Parameters Values			Min: 0	Max: 120		
Value	Description					
0-120	Specific duration time in seconds					

	Parameter Number	Size	Parameter Name	Default Value	De	escription
	23	1	STARTUP_ OUT	100	Define the outpu	ıt level on startup.
	Parameters Values				Min: 0	Max: 100
	Value	Descr	iption			
	0	OFF				
Η	1-99	Specific Level				
—						
NGL	<b>Timer management</b> It allows you to activate an ON and OFF timer independently. To activate the timer					

you need to:

- 1) Define which event will start the timer (Parameter 30)
- 2) To set the Off timer define the time with parameter 31
- 3) To set the On timer define the time with parameter 32.

Parameter Number	Size	Parameter Name	Default Value	Description			
30	1	TIMER_ SETUP	0	Define which trigger events activate the timers when output status has changed.			
Parameters	Values	5		Min: 0	Max: 127		
Value	Descri	iption					
0-120	Disable	ed					
1	1 click						
2	2 clicks						
4	3 clicks						
8	Hold down						
16	Up	Up					
32	Network (status change trigger by gateway or other devices in the Z-Wave™ network)						
64	System (based on the startup status, or other timer event)						
If more than 1 event is supported, the value for the configuration parameter is the sum of the event values. For example: 1 click and 2 clicks -> Parameter value must be $1 + 2 = 3$ Default value: Disable $\rightarrow 0$							

Parameter Number	Size	Parameter Name	Default Value	Description		
31	4	OFF_ TIMEOUT	0	Time in tenth of seconds after which the output will be switched Off.		
Parameters Values				Min: 0	Max: 360000	
Value	Description					
0-360000	Specific time expressed in tenth of seconds for Status change					

Parameter Number	Size	Parameter Name	Default Value	Description		
32	4	ON_ TIMEOUT	0	Time in tenth of seconds after which a output will be switched On.		
Parameters Values				Min: 0	Max: 360000	
Value	Description					
0-360000	Specific time expressed in tenth of seconds for Status change					

#### **Central Scene management**

	Parameter Number	Size	Parameter Name	Default Value	Descri	ption	
	60	1	SCENE_ SETUP	31	Define which event a central scene notif	1 55	
	Parameters	Values	S		Min: 0	Max: 31	
	Value Description						
ΗS							
<b>1</b>	1	1 1 click   2 2 clicks   4 3 clicks					
9	2						
z	4						
Ш	8	Hold d	own				
	16	Up					
	If more than 1 event are supported, the value for the configuration parameter is the sum of the event values. For example: 1 click and 2 clicks -> Parameter value must be $1 + 2 = 3$ 1 click and 3 clicks -> Parameter value must be $1 + 4 = 5$ <b>Default value: all event</b> $\rightarrow$ 31						

## **ZRX VARIANT OF THE DEVICE**

The section is valid ONLY for the ZRX variant of the device.

#### Association of a Cherubini remote control Skipper - Pop or Giro Series

LEGEND OF THE SYMBOLS:				
	rated n with ndicator Press button A Press buttons A and B at the same time			
Single BLUE Blink	Confirmation of sequence start recognition.			
Sequence of GREEN - BLUE	Confirmation of recognition of the Operation required. Duration of about 4 seconds, time within which the command confirmation must take place.			
4 GREEN blinks	Confirmation that the requested operation was completed successfully.			
4 RED blinks	The requested operation has not been carried out.			
4 BLUE blinks	Confirmation that all remotes have been deleted.			

# Setting the first remote control

This operation can only be performed when the product is new, or after a total delete of the memory. Every time you connect the device to the power supply, you have 3 hours to store the first remote control. After this time, the ability to store the remote control is disabled. To reset the timer of the function you have to disconnect and reconnect the power supply to the device, or to activate the procedure of deleting all the remote controls as described below.

The operation can be performed in two ways:

- T1: First remote control to be set
  - 1) Setting through operations with the remote control



2) Setting through operations with both remote control and device.







#### 2 sec

# Setting additional remote controls


It is possible to set up to 15 remote controls.

Tn: Already programmed remote control Tx: Additional remote control





44



#### Remote control memory clearing

It is possible to delete singly all the memorized remote controls. When the last one is deleted the motor initial condition is restored. The same applies to single channels of a multichannel remote control: just select the channel before performing the sequence.

#### Tn: Remote control to be cleared

This sequence deletes the remote control from all associated receivers.



#### This sequence deletes the remote control from only one receiver.



#### **Clearing all remote controls**

Total clearing from the memory is carried out by holding down the button integrated in the device for 5 seconds as indicated below



#### Controlling the device from a Cherubini Remote Control

د -د The events on the buttons of the remote control allow the controlling of the load as indicated in the following table.

	Button	Event	Result	
_		Click	Increase the dimming level on both	
LISH	B C	Hold Down	outputs.	
ENG	A	Click	Changing the load status	
	B B C	Hold Down	(from ON to OFF and vice versa).	
	A	Click	Decrease the dimming level on both outputs.	
	B C C	Hold Down		

#### CHERUBINI S.p.A.

Via Adige 55 25081 Bedizzole (BS) - Italy Tel. +39 030 6872.039 info@cherubini.it | www.cherubini.it

#### CHERUBINI Iberia S.L.

Avda. Unión Europea 11-H Apdo. 283 - P. I. El Castillo 03630 Sax Alicante - Spain Tel. +34 (0) 966 967 504 | Fax +34 (0) 966 967 505 info@cherubini.es

#### CHERUBINI France SAS

ZI Du Mas Barbet 165 Impasse Ampère 30600 Vauvert - France Tél. +33 (0) 466 77 88 58 info@cherubini.fr | www.cherubini.fr

#### **CHERUBINI Deutschland GmbH**

Siemensstrasse, 40 - 53121 Bonn - Deutschland Tel. +49 (0) 228 962 976 34 / 35 | Fax +49 (0) 228 962 976 36 info@cherubini-group.de | www.cherubini-group.de

